



Polaris RZR 170 2.0 Rear Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

Rear Parts List:

2 – 2.0 Piggyback Coilovers (20001-213)

Tools Required:

Floor Jack/Jack Stands
Metric Wrench/Socket Set
Standard Wrench/Socket Set




REAR: With the vehicle on level ground, block the front tires. Using a floor jack, raise the rear end and support the frame rails with jack stands for safety. **NOTE: Never work under an unsupported vehicle.**

1. Remove the factory or existing shocks by removing the upper and lower mounting bolts and remove the shocks from the vehicle.
2. Install King Shocks as shown below. Reuse the factory hardware and tighten all bolts to factory specs.



Make sure cables are not interfering with shock.

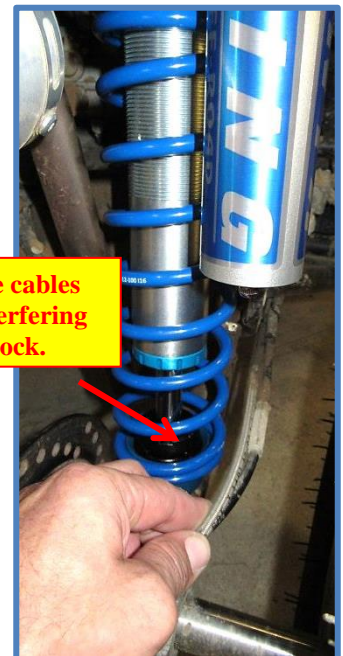

IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.